


## PUSH BUTTON STEM ASSEMBLIES


### PUSH BUTTON ASSEMBLY – 60-06429-51-590

REF NO	PART NUMBER	DESCRIPTION
1	16-06199-08-550	Adjusting Collar
2	11-10695-42-590	Set Screw
3	11-07459-43-550	Speed Clip (2 each)
4	10-08137-31-870	Snap In Bushing

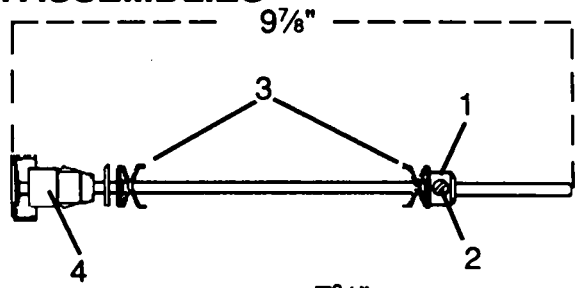


### PUSH BUTTON ASSEMBLY – 60-07553-51-590

REF NO	PART NUMBER	DESCRIPTION
1	16-06199-08-550	Adjusting Collar
2	11-10695-42-590	Set Screw
3	11-07459-43-550	Speed Clip (2 each)
4	10-08137-31-870	Snap In Bushing

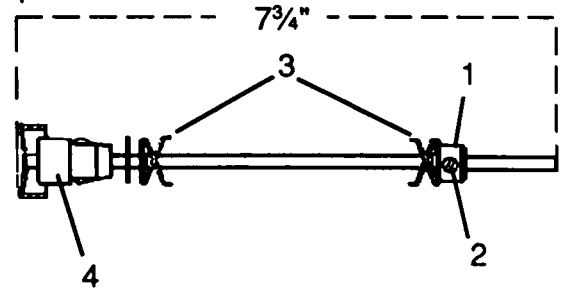


### PUSH BUTTON ASSEMBLY – 60-10337-51-590

REF NO	PART NUMBER	DESCRIPTION
1	16-06199-08-550	Adjusting Collar
2	10-08137-31-870	Snap In Bushing
3	11-10695-42-590	Set Screw

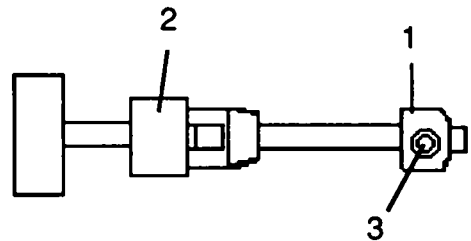


### PUSH BUTTON ASSEMBLY – 60-14511-51-590

REF NO	PART NUMBER	DESCRIPTION
NO PARTS AVAILABLE		

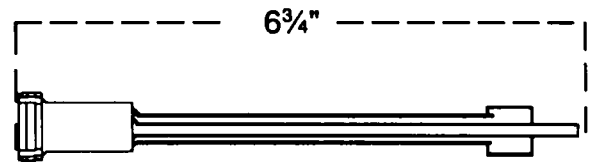

### PUSH BUTTON ASSEMBLY – 60-14743-51-590

REF NO	PART NUMBER	DESCRIPTION
1	16-06199-08-550	Adjusting Collar
2	11-10695-42-590	Set Screw
3	11-07459-43-550	Speed Clip (2 each)
4	10-08137-31-870	Snap In Bushing

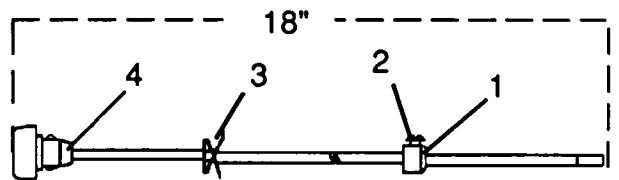

\* Look for detailed schematic of this part in Detailed Parts Section  
XXX - See Page I-A for Color Chart

**To order parts, contact your nearest Halsey Taylor wholesaler or representative.**

*Continued product improvement makes specifications subject to change without notice.*

**Halsey Taylor.**